



[www.rogue-4.com](http://www.rogue-4.com)

## LED LIGHT BAR - INSTALLATION INSTRUCTIONS

### **Preliminary Steps**


1. Read all instructions carefully and study diagrams before installing lights.
2. Check with state and local authorities for laws governing usage and proper mounting of auxiliary lamps.
3. Disconnect ground connection from battery (marked "-") to avoid accidental short circuits before attempting to connect electrical wires.
4. Route new wires along existing wiring. Tape as necessary to correct slack.
5. When running wires, keep them away from moving parts.

### **Wiring Instructions**

1. Mount switch in a convenient location where it is easily reached from the driver's seat.
2. Wiring: Red "+", black "-". Attach the Red wire terminal to positive side "+", and the black wire terminal to negative side "-" on battery or ground. (Vehicles)
3. Make sure the working voltage (DC12V/24V), choose the corresponding relays. (DC12V/24V)
4. Insert the lamp connector (A) to wiring connector (B)
5. Turn on the switch to make sure if the lamp works. If not, please check carefully if the wiring installing correct.

### **Caution**


- Only operate under the specified voltages (DC9-30V)
- This light becomes hot during continuous use. Don't remove the lamp or touch the casing for at least 30 minutes after turning the lamp off.
- Keep heat-sink clean and exposed to maintain air flow.

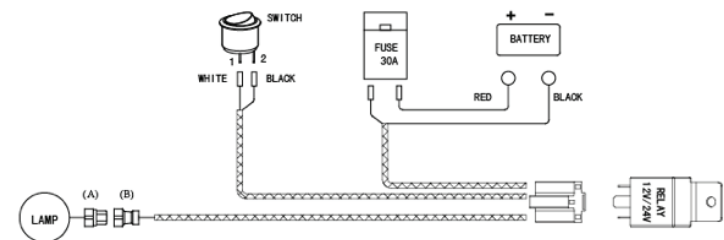

### Mounting Lights

#### Installation Method Using L bracket Mounts


1. Install the side mount on the lamps and fasten with bolts.
2. Drill M8 bolt holes at the appropriate position of the mounting plate where you would like to fix the base and attach the mounting plate.

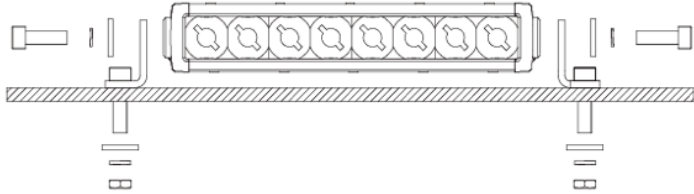

### Mounting Lights


#### Installation Methods

1. Install the side mount on the lamps and fasten with bolts.
2. Drill M8 bolt holes at the appropriate position of the mounting plate where you would like to fix the base and attach the mounting plate.

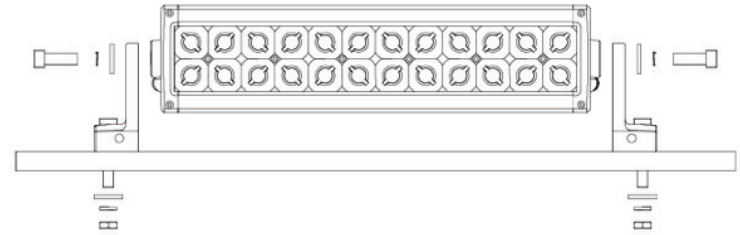


#### Installation Method Using Pipe Mount Adapters

1. Install the side mount on the lamps and fasten with bolts.
2. Attach the clamps onto the roll bar/pipe/tube.
3. Insert the bolt through the clamp, mount, and roll bar then tighten it.

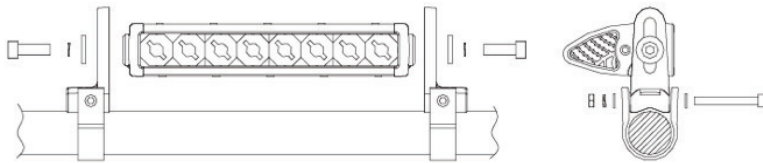

#### Installation Methods (II)

1. Install the side mount on the lamps and fasten with bolts.
2. Attach the clamps onto the roll bar/pipe/tube.
3. Insert the bolt through the clamp, mount, and roll bar then tighten it.

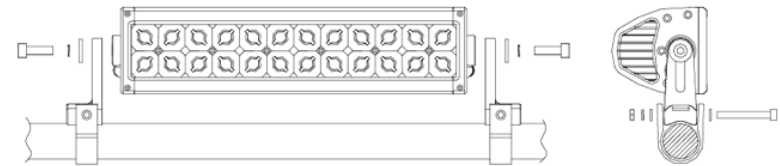

## Limited Lifetime Warranty

### What This Warranty Covers

This is a "Limited" warranty. This warranty covers any defects in materials and workmanship and warranty only applies to the original purchaser and is not transferable. This warranty is also only valid if the original purchase was made from an authorized Rogue 4 dealer.

### How Long Coverage Last

**From date of purchase to 1 year** - The customer is responsible for shipping charges to Rogue 4 for repair of the product. Rogue 4 will cover all parts, labor and return shipping to the customer.

**After 1 year** – The customer is responsible for all shipping charges to Rogue 4 for repair of the product and labor. Rogue 4 will cover all parts and return shipping.

### What Is Not Covered

This warranty does not cover fading or discoloration caused by exposure to sunlight or chemicals such as ammonia, household bleach, or any cleaning material that contains abrasive substances. Rogue 4 does not cover the cost for removal and reinstallation of any kind. This warranty is void and inapplicable if Rogue 4 deems that the product was abused or misused; including but not limited to damage caused by accident, mishandling, improper installation, negligence, normal wear and tear, excessive water or heat damage, freight damage or products that have been altered in any way. Product owned by anyone other than the original purchaser from an authorized Rogue 4 dealer. (The warranty is not transferable and will not apply to products purchased from unauthorized dealers.) Rogue 4 is not responsible for any damages to a consumer's vehicle or person from a product failure. The warranty is void if Rogue 4 deems the product was installed or used improperly. Rogue 4 shall not be responsible for any incidental or consequential damages, except to the extent provided (or prohibited) by applicable law. This warranty gives you specific legal rights, and you may also have other rights which vary from state.

### How to Obtain Warranty Service

Contact Rogue 4 either by phone at 855-476-4834 or by email at [warranty@rogue-4.com](mailto:warranty@rogue-4.com). A service representative will assist you in the necessary actions to verify that the problem that you are experiencing is covered under warranty. If it is in fact a warranty issue, Rogue 4 will issue an RA number for tracking purposes and give instructions on sending the product in for evaluation.

### Internet Warning

Rogue 4 products sold on any non authorized web site or internet auction site are void of any and all manufacturer's warranty. Please contact Rogue 4 at 855-476-4834 or visit our web site at [www.rogue-4.com](http://www.rogue-4.com) to search for an authorized site and/or an authorized retailer near you.



### Rogue 4

9330 West Airport Blvd. suite 170  
Houston, Texas 77031  
[www.rogue-4.com](http://www.rogue-4.com)  
Toll Free: 855-476-4834